

Instruction Sheet

VIQUA Flow Meter Installation

Section 1 Safety Information

Please read this entire instruction sheet before installation. Pay attention to all danger, warning, and caution statements. Failure to do so could result in serious personal injury or damage to the equipment.

Make sure that the protection provided by this equipment is not impaired. Do not use or install this equipment in any manner other than that specified in the installation manual.

1.1 Safety Precautions

⚠ DANGER	
      	Failure to follow these instructions will result in serious injury or death. Shock Hazard - Stored Energy • Disconnect power to system before performing any maintenance or repair. • There may be more than one source of power. Only connect to a GFCI. • Protective ground • DO NOT touch with wet hands. Pressurized Device - Impalement Hazard • NEVER perform any physical inspection, repair or maintenance on UV chamber unless UV chamber has been isolated and depressurized. • NEVER service UV lamps, quartz sleeves or associated hardware until depressurization of UV chamber has been confirmed. • DO NOT store any combustible or flammable material close to the system.
⚠ WARNING	
   	Failure to follow these instructions could result in serious injury or death. UV Light Hazard • ALWAYS use UV protective gear, including gloves and UV safety glasses. • NEVER look directly at illuminated UV lamp, even when using protective gear. • NEVER illuminate UV lamp outside of the UV chamber. • If accidental exposure occurs, immediately cool affected area and consult physician. Contamination Hazard • If UV lamp breaks, avoid inhalation, ingestion, or exposure to eyes and skin. Wear appropriate clothing and personal protective equipment. • NEVER use a vacuum cleaner to clean up broken UV lamps as this will scatter the mercury. Obey local regulations and guidelines for the removal and disposal of mercury waste.
	WARNING: This product can expose you to chemicals including Phthalates, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

⚠ CAUTION



Thermal Hazard

- Allow UV lamps, UV chamber to cool for a minimum of 10 (ten) minutes before handling.
- When there is no water flow, the water in the chamber will become hot. To prevent scalding, allow the system to cool for 10 minutes before draining the system.



Personal Injury Hazard

- UV lamps and quartz sleeves are fragile. Do not strike, bend or apply pressure, or they will break.
- DO NOT handle UV lamps or quartz sleeves with bare hands. Wear rubber or latex gloves to handle previously installed UV lamps and soiled quartz sleeves to protect against contaminants. Wear cotton gloves to handle new UV lamps and clean quartz sleeves.

NOTICE



Avoid Injury

- Read and understand this Instruction Sheet before operating and performing any maintenance on this equipment.

System Protection

- To protect the Controller, a UL 1449 certified (or equivalent) transient voltage surge suppressor is strongly recommended.

Section 2 Installation

2.1 Flow Meter Components

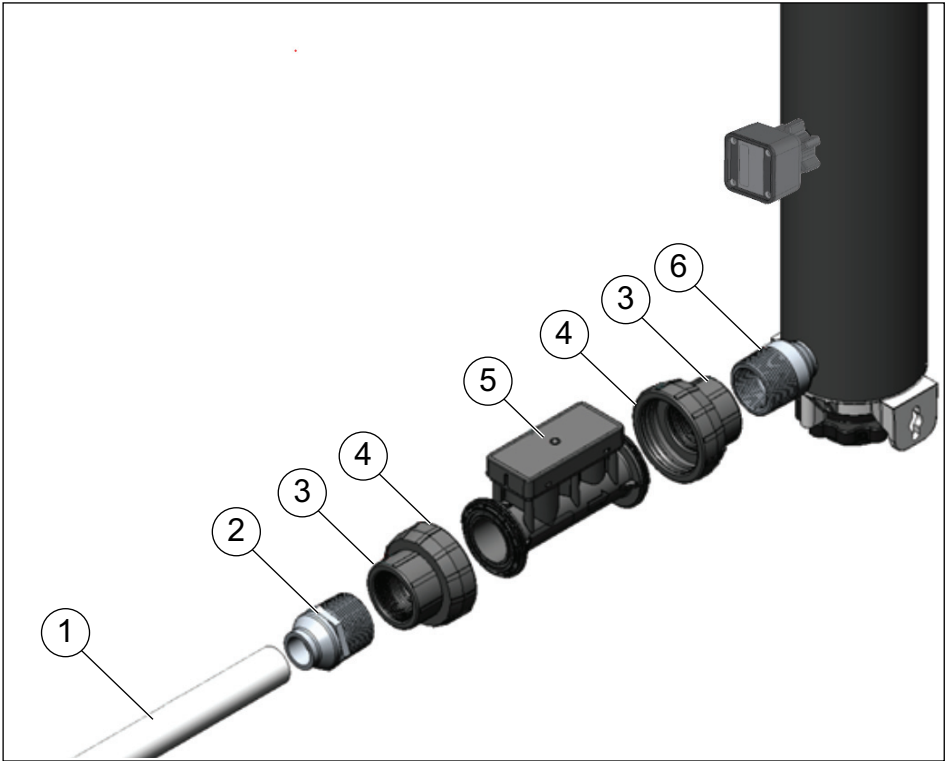


Figure 1 System Components

Item	Description	Item	Description
1	1" pipe	4	Union nut
2	1 1/4" NPT to 1" reducer	5	Flow meter
3	Union hub	6	NPT inlet thread

2

VIQUA

2.2 Installing Flow Meter

Procedure:




- Apply three loops of PTFE tape to NPT inlet thread.




- Tighten union hub and nut approximately 4 turns from initial engagement or until leak-tight.


Note: DO NOT over tighten as excessive force may damage fittings.

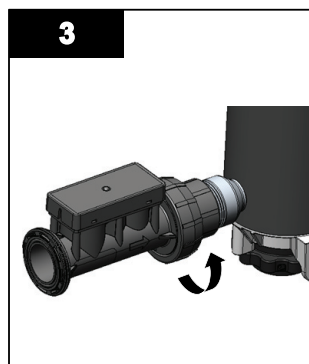

- Attach flowmeter, hand tighten union nut (approximately 1ft-lb of torque).

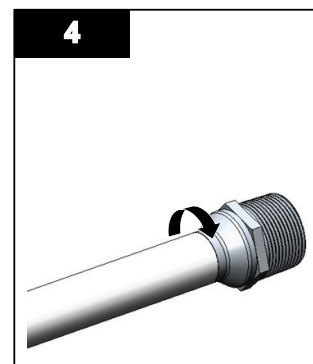


- Connect a 1 1/4" NPT- 1" reducer to a 1" pipe.
- Apply three loops of PTFE tape to NPT thread.

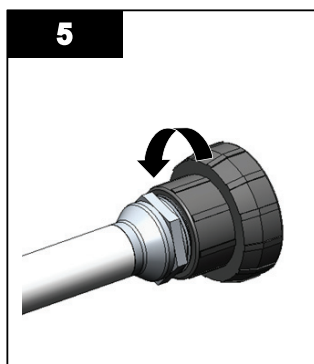

- Tighten union hub and nut to reducer approximately 4 turns from initial engagement or until leak-tight.

Note: DO NOT over tighten as excessive force may damage fittings.

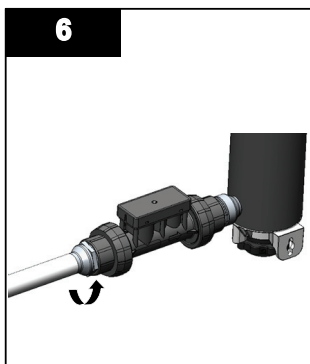

- Hand tighten locking nut (Approximately 1 ft-lb of torque).

2.3 Cleaning Procedure

Refer to Owner's Manual for cleaning procedure.



425 Clair Rd. W, Guelph, Ontario, Canada N1L 1R1
t. (+1) 519.763.1032 • tf. (+1) 800.265.7246 (US and Canada only)
t. (+31) 73 747 0144 (Europe only) • f. (+1) 519.763.5069
e-mail: info@viqua.com
www.viqua.com

